

Bomeiflor Florida

Directional Homogeneous Vinyl Sheet Flooring



Bomeiflor Florida Homogeneous Vinyl Flooring Sheet incorporate a polyurethane reinforcement, which protects the flooring by resisting soiling and scuffing. Combined with the superior closed surface finish, this enhanced protection allows the use of a polish-free maintenance regime. This protection ensures that the intensity of the maintenance and overall cleaning costs are significantly reduced.

The following maintenance instructions are designed to maximize the benefits of the PUR, resulting in lower maintenance costs, without compromising the long-term appearance of your flooring.

Maintenance Instruction

- ✧ Clean the flooring regularly, as this is more cost-effective and hygienic than occasional heavy-duty cleaning.
- ✧ Always follow dosage instructions carefully.
- ✧ Wipe up any grease and spilt oil immediately, as they may damage the surface.
- ✧ Resilient floors are damaged by solvents.
- ✧ Black rubber wheels and rubber feet can discolor the flooring. All chair and table legs should have good quality floor protectors. Felt pads are not recommended in commercial interiors. Hard plastic is preferred.
- ✧ Remember that light colors need more frequent cleaning.

Initial Construction Clean

An initial site cleaning is always carried out before using new flooring. Always protect the floor with hardboard or similar during the construction period.

- ✧ Remove all loose debris.
- ✧ Ensure that all traces of adhesive are removed from the surface of the flooring.
- ✧ Mop sweep or vacuum to remove dust and grit.
- ✧ Damp mop with a neutral detergent.
- ✧ If required, dry buff with a 1000 rpm plus rotary machine fitted with a suitable clean pad.

Preventive Care - Entrance Mat

About 80% of surface soiling that has to be cleaned off is brought in from outside.

And 90% of that soiling can be avoided using an effective and correctly dimensioned entrance mat.

The less dirt that comes in through the entrance, the lower the maintenance requirements.

Routine Maintenance - Daily < Warning : Always follow dosage instructions carefully >

- ✧ Mop sweep or vacuum to remove dust and loose dirt.
- ✧ If required, spot mop to remove stubborn marks, with a neutral cleanser.

Routine Maintenance - Weekly

- ✧ Assess the appearance of the floor. Undertake the following as required:
- ✧ Light scuffing – dry buff with a 1000 rpm plus rotary machine fitted with a suitable clean pad.

Routine Maintenance - Periodically

- ✧ Assess the appearance of the floor. If the floor has dirt build-up, machine scrub with a scrubber dryer (approx. 165rpm) fitted with a suitable clean pad, using a neutral or alkaline detergent, as appropriate.
- ✧ Rinse thoroughly and allow to dry.
- ✧ Dry buff to restore finish.